

1




2

Place the folded table on a flat surface and unfold once.



3

Unfold twice.

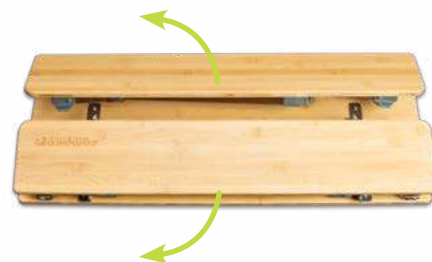


4



5

Unfold all four legs up. Make sure the leg locks are in the right position. See step 6 & 7.

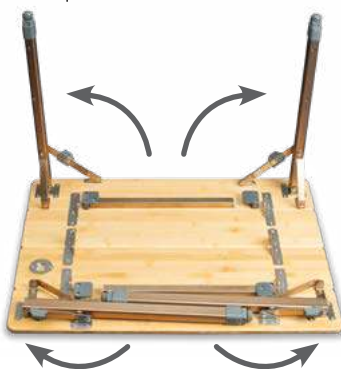

6



7




8

Turn the crossbars 90° degrees and click in place.



9

While the table is upside down adjust the legs to the desired height.

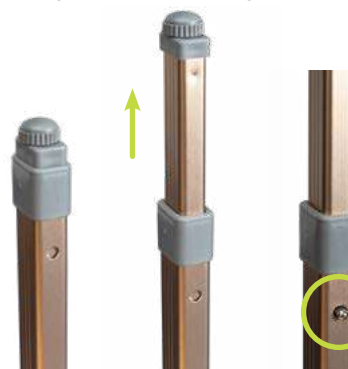

10



11



12






1




2

Turn the table upside down to lower the legs by pushing the bottom in and slide legs down.

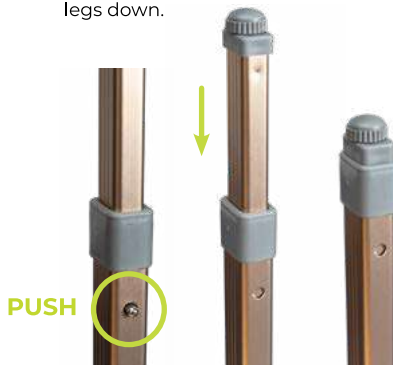

3

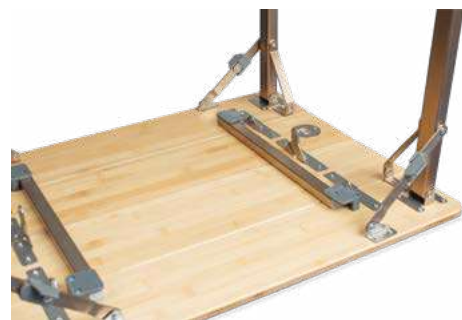

4

Turn the crossbars 90° degrees parallel to the bamboo panels.




5

Push the leg locks down to fold all four legs in place.




6

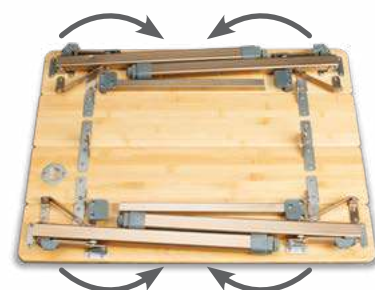

7

Fold outside panels inwards.

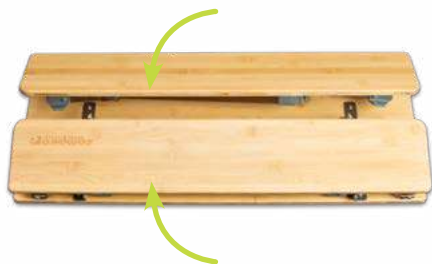

8

Fold one more time.



9

Now the folded table can go back in its carry bag.



10



2 Year Limited Warranty

We take pride in the quality and design of every ZEMPIRE table or cupboard, that's why our TABLES & CUPBOARDS come with a strong guarantee designed to protect you as our valued customer. ZEMPIRE will repair or replace this product, should it fail due to faulty materials or manufacture for a period of 2 years from the date you purchase.

For a full explanation of what is covered under this warranty please refer to our website www.zempire.co.nz/warranty.

Care & Safety information:

- Do not stand on your table.
- Clean thoroughly after each use. Wash by hand with warm water and a soft towel or sponge.
- Do not use harsh cleaning chemicals.
- Leave the cupboard to dry out completely before putting it away.
- Do not keep the cupboard in direct sunlight or leave it in the rain.
- Store away from chemicals and moisture.
- In case re-coating is required; sand lightly with an extra fine-grit sandpaper. Reseal surface with a few coats of wood sealer product for ample water protection.