



INSERT ALL SIX POLES, ROUND SIDE FIRST, INTO THE HOLES AROUND THE OUTSIDE OF THE ICE BATH. PUSH THE POLES ALL THE WAY TO THE TOP OF THE SLOTS.



INSTALL THE BLACK RUBBER SEAL RING ON THE THREADED DRAINAGE HOLE, LOCATED ON THE OUTSIDE OF THE TUB.



SCREW THE DRAINAGE VALVE ONTO THE THREADED DRAINAGE HOLE. ENSURE THE DRAINAGE VALVE IS TIGHTLY SCREWED ON AND SWITCHED CLOSED.



SECURELY FASTEN CLOSED THE SECOND DRAINAGE HOLE, LOCATED ON THE BOTTOM OF THE INSIDE OF THE TUB.



INSERT THE CENTRAL AIR NOZZLE SEGMENT INTO THE BASE OF THE AIR NOZZLE. THIS ENSURES NO AIR WILL ESCAPE DURING INFLATION.



FIRMLY INSERT THE TIP OF THE AIR PUMP INTO THE AIR NOZZLE AND PUMP UNTIL ALL CREASES IN THE INFLATABLE RING ARE REMOVED. INSERT THE LAST AIR NOZZLE SEGMENT INTO THE BASE TO SEAL THE INFLATABLE RING.

## THAT'S IT! FILL WITH WATER AND ICE, AND PLUNGE!



AVOID STORING THE TUB IN DIRECT SUNLIGHT OR EXTREME HEAT FOR EXTENDED PERIODS OF TIME. DOING SO MAY CAUSE THE INFLATABLE RIM TO BECOME WARPED.

# Foldable Bathtub

