










Installation and operation instruction

1) Hardware and parts list :


NO.	Item	Photo	QTY	NO.	Item	Photo	QTY
1.	Base Plate & Support leg		4pcs	2.	Pivot Arm		1 pcs
3.	U-arm		2 pcs	4.	bottom tube		1pcs
5.	hydraulic rod		2 pcs	6.	Hex Cap Bolt; Flat Washer; Locknut(M8*40mm)		4pcs
7.	Mounting screws (M5*40mm)		16 pcs		Self tapping screws (M4.8*16mm)		14 pcs

2) Installation Steps:


1. Firstly, put one support leg into the hole of the pipe which on the base plate, and the same as another base plate.

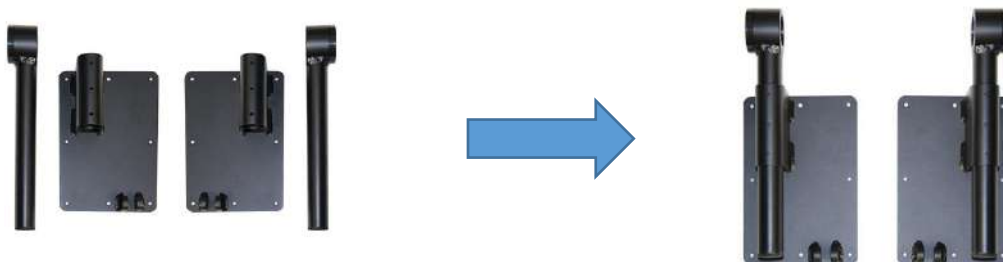

2. Secondly, place two base plate on two sides of the pivot arm, then put the pivot arm aim to the hole of the support leg, and push the base plate until the round object.

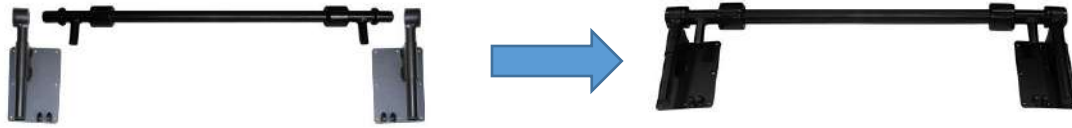

3. Thirdly, put the bottom tube into the tube of U-arm.

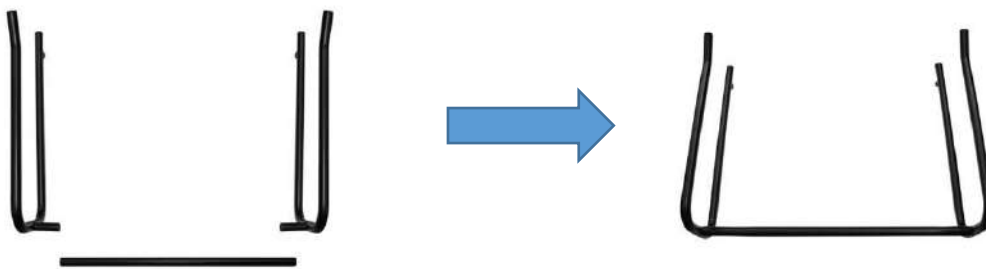

4. Then, Link the well-install U-arm with the tube of the pivot arm.

5. Next, put the one side of hydraulic rod in the middle of the hole of U-arm, and attach the other side of the hydraulic rod to the screw holes which on the base plate, then fix it. (That is A to A and B to B)



6. Attach the base plate on the spa surface with 16x mounting screws (That is D), Using 14x self tapping screws to fasten all support leg and base plate(That is C,E,F).

