OWNER'S MANUAL

#65046

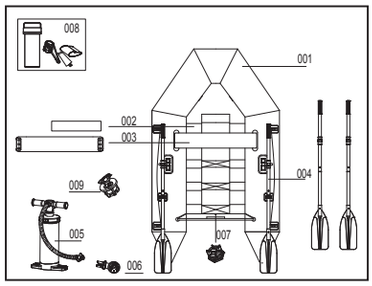

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65046ASS15
002	Floor board	4	P6875
003	Bench seat	1	F3H101
004	Oar	1 pair	P5L334
005	Air pump	1	P3045B
006	Pressure gauge	1	P5C403
007	Drain valve	1	F3C092ASS14
008	Repair kit	1	P6J718ASS14
009	Air valve	2	F6H190

#65064

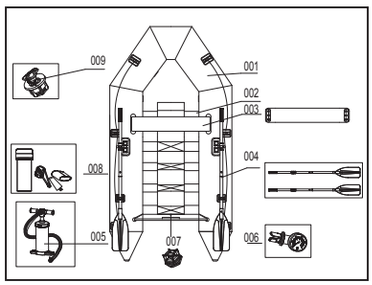

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65064ASS15
002	Floor board	5	P6875
003	Bench seat	1	F3H101
004	Oar	1 pair	P5L334
005	Air pump	1	P3045B
006	Pressure gauge	1	P5C403
007	Drain valve	1	F3C092ASS14
008	Repair kit	1	P6J718ASS14
009	Air valve	3	F6H190

#65047

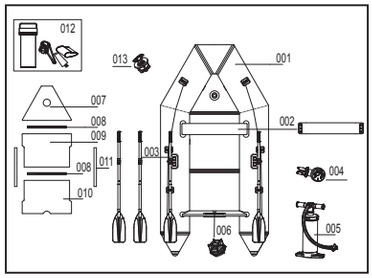

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65047ASS15
002	Bench seat	1	P6876
003	Oar	1 pair	F6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Board 1	1	P6877
008	Board slot	2	P6880
009	Board 2	1	P6878
010	Board 3	1	P6879
011	Side slot	2	P6881
012	Repair kit	1	P6J718ASS14
013	Air valve	4	F6H190

#65048

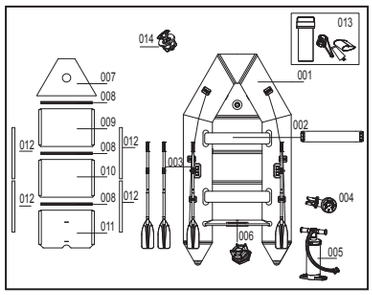

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65048ASS15
002	Bench seat	2	P6876
003	Oar	1 pair	F6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Board 1	1	P6882
008	Board slot	3	P6885
009	Board 2	1	P6883
010	Board 3	1	P6883
011	Board 4	1	P6884
012	Side slot	4	P6886
013	Repair kit	1	P6J718ASS14
014	Air valve	4	F6H190

#65049

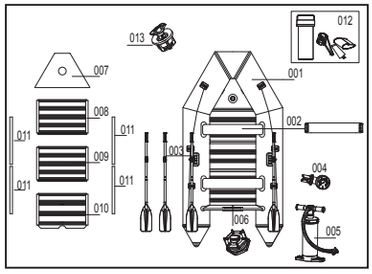

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65048ASS15
002	Bench seat	2	P6876
003	Oar	1 pair	F6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Board 1	1	P6894
008	Board 2	1	P6887
009	Board 3	1	P6887
010	Board 4	1	P6888
011	Side slot	4	P6886
012	Repair kit	1	P6J718ASS14
013	Air valve	4	F6H190

#65063

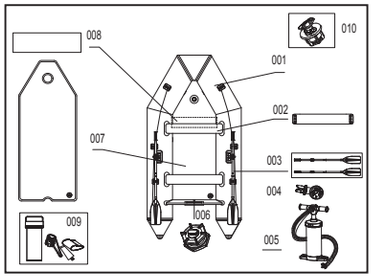

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65048ASS15
002	Bench seat	2	P6876
003	Oar	1 pair	P6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Airdeck floor	1	65063DASS15
008	Base board	1	P6928
009	Repair kit	1	P6J718ASS14
010	Air valve	5	F6H190

#65050

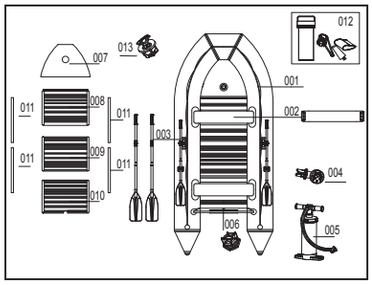

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65050ASS15
002	Bench seat	2	P6889
003	Oar	1 pair	F6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Board 1	1	P6890
008	Board 2	1	P6891
009	Board 3	1	P6891
010	Board 4	1	P6892
011	Side slot	4	P6893
012	Repair kit	1	P6J718ASS14
013	Air valve	4	F6H190

#65062

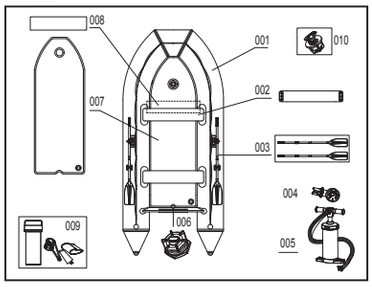

Part No.	Description	QTY	SPARE PART NO.
001	Boat	1	65050ASS15
002	Bench seat	2	P6889
003	Oar	1 pair	P6H717ASS14
004	Pressure gauge	1	P5C403
005	Air pump	1	P3045B
006	Drain valve	1	F3C092ASS14
007	Airdeck floor	1	65062DASS15
008	Base board	1	P6927
009	Repair kit	1	P6J718ASS14
010	Air valve	5	F6H190

EN ISO 6185 - 1 TYPE II
SHELTERED WATER
= 2.25 kw (3.0 hp) = 2 = 0
+ + = 258 kg (568.8 lbs.)
= 0.23 bar 3.34 psi
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65046
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

EN ISO 6185 - 1 TYPE II
CATEGORY D
= 3.7 kw (5 hp) = 3 = 0
+ + = 380 kg (837 lbs.)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65064
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

EN ISO 6185 - 2 TYPE V
CATEGORY D
= 7.5 kw (10 hp) = 3 = 1
+ + = 480 kg (1058.2 lbs.)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65047
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

EN ISO 6185 - 2 TYPE V
CATEGORY C
= 11.2 kw (15 hp) = 4 = 1
+ + = 640 kg (1411 lbs.)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65048
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

EN ISO 6185 - 2 TYPE V
CATEGORY C
= 11.2 kw (15 hp) = 4 = 1
+ + = 640 kg (1411 lbs.)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65049
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

EN ISO 6185 - 2 TYPE V
CATEGORY C
= 11.2 kw (15 hp) = 4 = 1
+ + = 640 kg (1411 lbs.)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
HOLDER OF CERTIFICATE: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
TYPE OF MODEL NUMBER: 65063
COUNTRY OF ORIGIN: CHINA
MANUFACTURER: Bestway

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 英

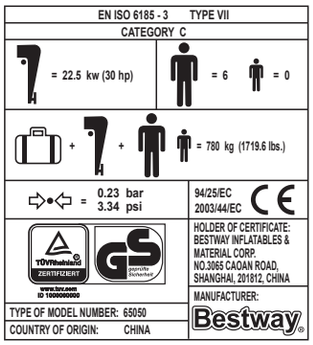

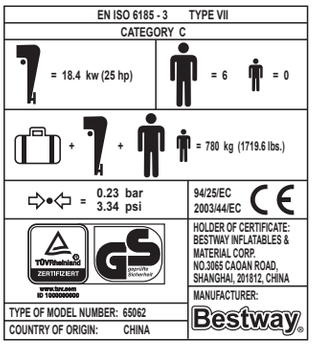

Design Category D "SHELTERED WATERS"
SHELTERED WATERS: Designed for voyages on sheltered coastal waters, small bays, small lakes, rivers and canals when conditions up to, and including, wind force 4 and significant wave heights up to, and including, 0,3m may be experienced, with occasional waves of 0,5m maximum height, for example from passing vessels.

Design Category C "INSHORE": Designed for voyages in coastal waters, large bays, estuaries, lakes and rivers where conditions up to, and including, wind force 6 and significant wave heights up to, and including, 2m may be experienced.

WARNING: To avoid damage to the boat and injury to passengers, please don't exceed the data given on the builder's plate.

Technical Specifications

Item	Size	Recommended working pressure	Maximum load capacity	Maximum motor power
65046	2.30m x 1.30m (91"x51")	3.34psi 0.23bar	258 kg (568.8 lbs.) 2 adults	2.25 kw (3 hp)
65064	2.70m x 1.37m (106" x 57")	3.34psi 0.23bar	380 kg (837 lbs.) 3 adults	3.7 kw (5 hp)
65047	2.80m x 1.52m (110" x 60")	3.34psi 0.23bar	480 kg (1058.2 lbs.) 3 adults + 1 child	7.5 kw (10 hp)
65048;65049 65063	3.30m x 1.62m (130" x 64")	3.34psi 0.23bar	640 kg (1411 lbs.) 4 adults + 1 child	11.2 kw (15 hp)
65050	3.80m x 1.80m (150" x 71")	3.34psi 0.23bar	780 kg (1719.6 lbs.) 6 adults	22.5 kw (30 hp)
65062	3.80m x 1.80m (150" x 71")	3.34psi 0.23bar	780 kg (1719.6 lbs.) 6 adults	18.4 kw (25 hp)

WARNING
IMPORTANT SAFETY INSTRUCTIONS

Follow all the Safety and Operating Instructions. If you don't follow these instructions, it may cause the boat to overturn or explode and result in drowning.

1. Do not exceed the maximum recommended number of persons. Regardless of the number of persons on board, the total weight of persons and equipment must never exceed the maximum recommended load. Always use the seats / seating spaces provided.
2. When loading the craft, never exceed the maximum recommended load: Always load the craft carefully and distribute loads appropriately to maintain design trim (approximately level). Avoid placing heavy weights high up.
   NOTE: The maximum recommended load includes the weight of all persons onboard, all provisions and personal effects, any equipment not included in the light craft mass, cargo (if any) and all consumable liquids (water, fuel, etc.).
3. When using the boat, life saving devices such as life jackets and buoys should be pre-inspected and used at all times.
4. Before every use, carefully inspect all boat components including air-chambers, grab ropes, oars, and air valves, to ensure everything is in good condition and tightly secured. If you find any damage, please stop to repair it.
5. Buckets, water scoops and air pumps should always be available in case of air leakage or if the boat takes on water.
6. When the boat is in motion, all passengers must remain seated at all times to avoid going overboard. Keep the boat balanced. Uneven distribution of persons or load in the boat may cause the boat to overturn and result in drowning.
7. Use the boat near the shore and beware of natural factors such as wind, tide waters and tidal waves. **BE AWARE OF OFFSHORE WINDS AND CURRENTS.**
8. If one chamber is punctured when the boat is in the water, it may be necessary to fully inflate the other air chamber to prevent the boat from sinking.
9. Be careful when landing on the shore. Sharp and rough objects such as rocks, cement, shells, glass, etc. may puncture the boat. To avoid damage, do not drag the boat on rough surfaces.
10. When choosing an outboard motor, refer to the technical specifications section of this manual to determine acceptable horsepower ratings.
11. For electrical motors equipped with batteries, note that battery acid can be caustic, which can cause damage to both skin and boat materials.
12. For motors which use fuels such as gas, oil or petrol, since fuel is a flammable substance, it should be kept away from open flames. Further, clean the boat material immediately if fuel spatters onto the boat surface. Be aware of the potential harmful efects of liquids such as battery acid, oil or petrol. The liquids may damage your boat.
13. Inflate according the numbered air chamber and rated pressure of the boat, or it will cause over-inflation and potential and boat explosion. Exceeding the data given on the capacity plate may cause the craft to be damaged, overturn and lead to drowning.
14. If you use the tow rings to tow the boat, go slowly to avoid over-towing as damage may occur.
15. Know how to operate a boat. Check in your local area for information and/or training as needed. Inform yourself about local regulations and dangers related to boating and/or other water activities.

SAVE THESE INSTRUCTIONS

Floor boards Installation (Only for 65047 / 65048 / 65049 / 65050)

1. Select a smooth, flat location and clear the area of any sharp objects. Take out the boat from the package and spread it out.
2. Inflate the keel and assemble the floor boards.
3. Insert Board 1 into the bow and push it forward until the Air Valve of the inflatable keel is aligned with the hole in the board. (FIG. 1)
4. Insert the last numbered board (Board 3 or Board 4) into the stern of the boat and push the board under the transom. (FIG. 2)
5. Align the protrusion of Board 1 with slot on Board 2 and push the two pieces together. Align the protrusion of Board 3 with slot on Board 4 and push the two pieces together. (FIG. 3) For wood floors, use the board slots to connect the two boards.
6. Lifting up Boards 2 and 3, align the protrusion of Board 2 with slot of Board 3 and push the two boards down making them flush. (FIG. 3)
7. Connect the side slots to the floorboards. (FIG. 4)

Note:
- The floorboards must be assembled before inflating the hull.
- Identifying numbers on floor boards must face upwards.
- After assembly, carefully check that the floorboards are tight. If the floorboards are not tight or smooth, reassemble them.

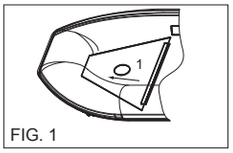

FIG. 1

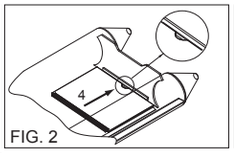

FIG. 2

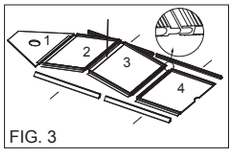

FIG. 3

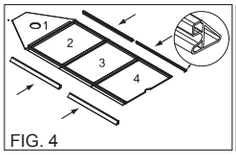

FIG. 4

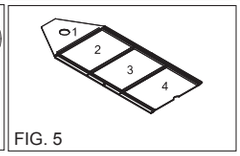

FIG. 5

Airdeck floor installation (only for 65062/65063)

1. Select a smooth, flat location and clear the area of any sharp objects. Take out the boat from the package and spread it out.
2. Pass the base board through the belt under the airdeck floor. Put the airdeck floor onto the keel and then inflate.

Hull Assembly

1. Inflate the board by unscrewing the cap of the air valve (FIG.6 POS.1). Ensure that the inner spring valve is not depressed. If it is depressed (FIG. 6 POS. 2), press the spring valve and turn counter clockwise so the inner spring valve is in the correct position (FIG.6 POS. 3). Attached the pressure gauge onto the hose and the hose to the inflate position on the high-pressure hand pump. Inflate the board to 0.23 bar (3.34 psi). After inflation, screw the cap of air valve (FIG.6 POS. 4)

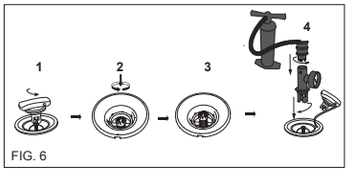

FIG. 6

NOTE: If over-inflation occurs, press the control stem to reduce air pressure to acceptable levels and securely fasten the pressure valve.

NOTE: Pressure gauge is for inflation purpose only, and the value of the pressure gauge is just for reference, should not be used as a precision instrument.

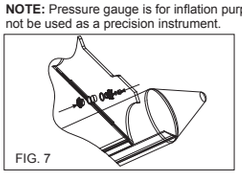
FIG. 7

2. Insert the plug into the drain valve on the transom. (FIG. 7)

Notes:
- Only use Bestway® approved inflation pumps.
- Never use motor-driven high-pressure air pumps as this may result in over-inflation.
- Under and over-inflation will result in safety hazards.
- Always check the inflation pressure before using the boat.
- Never stand on or rest objects on the boat during inflation.
- Never open the cap of air valve while the boat is in use.
- Be sure the valve is tightly closed before using the boat.


FIG. 8

Seat Board Installation
Slide the seat into position by inserting the flaps on both chamber of the boat into notches on the Seat Board. (FIG. 8)

Oars Installation
1. Connect the two shafts of the oars together; ensure the spring-loaded pins snap into position. (FIG. 9)
2. Attach the oars to the oarlocks and lock them into position. (FIG. 10 & 11)

Note: When the oars are not in use, lock the oars into the Oar Clasps to avoid damage.


FIG. 9


FIG. 10


FIG. 11

Outboard Motor Installation
With the boat fully inflated and in the water, attach your outboard motor onto Engine Mount at the center of the Transom.
Note:
- Ensure the motor is always fixed on the Transom.
- Read the instruction of outboard motor for correct installation and operation.
- Overpowering a boat can result in serious injury, death or boat damage. The maximum motor power to be used see marking on the product.

Deflation

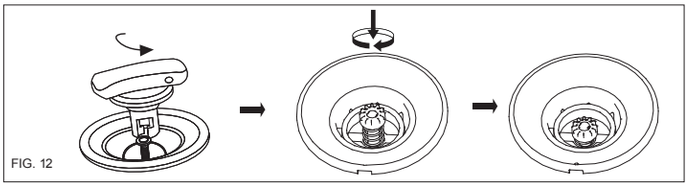
FIG. 12

Storage
1. Remove the Oars from the oarlocks.

Note: Keep all accessories for future use.
2. Carefully clean the boat using a mild soap with clean water.

Note: Do not use acetone, acid, and/or alkaline solutions.
3. Use a cloth to gently dry all surfaces.

Note: Do not dry the product in direct sunlight. Also, never dry with equipment such as electric blowers. Doing so will cause damage and shorten the boat's life span.
4. To deflate, open the Air Valves pushing the control stem in and rotating until the valves stay open. Deflate all the hull chambers at the same time so the air-pressure drops together. This will prevent damage form occurring to the boat's inner structures.
5. Next deflate the Keel.
6. Fold the boat from front to back to remove additional air. You can also use a pump to drain any remaining air.

Repair
If there are bigger holes on the boat, use the provided glue and repair patch.

Registration (For US/Canada customers only)
If you need to register your boat, please have the boat Hull Identification Number and model name ready and then visit www. bestway-service.com to obtain your Certificate of Origin, or you can send e-mail to info@bestway-northamerica.com for the Certificate of Origin.

PLEASE KEEP THIS MANUAL IN A SECURE PLACE, AND HAND IT OVER TO THE NEW OWNER WHEN YOU SELL THE CRAFT.

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 英

Limited BESTWAY® Manufacturer's Warranty

The product you have purchased comes with a limited warranty. Bestway® stands behind our quality guarantee and assures, through a replacement warranty, your product will be free from manufacturer's defects that result in leaks.
To enact a warranty claim, this form must be completed and submitted with a copy of your purchase receipt to your local Bestway After Sales Center. Please contact your local Bestway After Sales Center before sending any documents – they will provide full instructions of what is needed for your claim. Bestway® will not replace any products deemed to have been damaged due to negligence or having been used outside of the owner's manual guidelines.
Bestway's warranty covers manufacturing defects discovered while unpacking the product or during use as recommended within the user manual, this warranty applies only to product which must not have been modified by any 3rd parties. The product must be stored and handled in accordance with the technical recommendations.
This warranty is subject to the following limitations:
The warranty is valid for the original owner and only when this product is used for normal recreational activities and does not cover products used in rental, or school operations. If a product is deemed to be defective by Bestway, the warranty covers the repair or replacement of the defective product only. Bestway will not be responsible for any costs, losses, or damages incurred as a result of loss or use of this product. This warranty does not cover damage caused by misuse, abuse, neglect, normal wear and tear including, but not limited to, punctures, damage due to excessive heat exposure, damage caused by improper handling and storage, damage caused by use in waves or shore break, board breakage caused by falling or crashing in surf conditions, or damage caused by anything other than defects in material and workmanship.
This product must not be used in excess of the manufacturers recommended maximum load capacity. This warranty is void if any unauthorized repair, change or modification has been made to any part of the equipment.
Replacements and repairs don't extend the duration of the warranty. The date to be considered as the start of the warranty is only the one shown in the original receipt/purchase invoice.
This product is designed in accordance with standards for a specific use. Any modifications or transformations higher than that indicated by the manufacturer could result in serious risks for the user and will void the warranty.

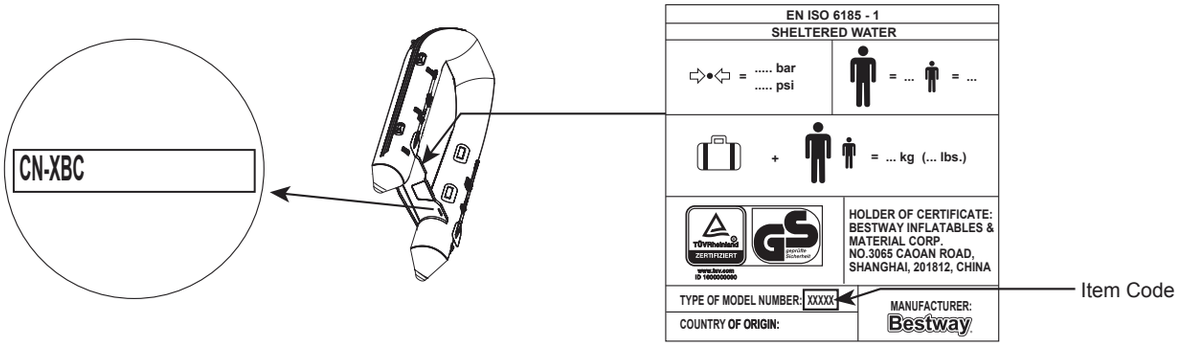

All drawings for illustration purpose only. Not to scale.

Please copy the CIN number located near the stern **Please Clearly Write Your Item Code:** _____

CIN number: _____ **Date of purchase receipt:** _____

TO: BESTWAY® SERVICE DEPARTMENT DATE _____ **Customer Code Number** _____

FAX/E-MAIL/TEL: Please refer to your country according to the information you find on the back cover or on our website: www.bestway-service.com
Please provide your address details in full. **Note:** Incomplete address details will result in delayed shipments.
Bestway reserves the right to charge for redelivery of undelivered packages where the recipient is at fault.

REQUIRED INFORMATION - PLEASE WRITE THE DELIVERY ADDRESS

Name: _____ **Address:** _____

Zip code: _____ **Retailer:** _____

Country: _____ **City:** _____

Mobile: _____ **Telephone:** _____

Fax: _____ **E-mail:** _____

Description of problem

◯ Air leaking, please describe exactly which part is leaking _____

◯ Item is incomplete, insert the name of the missing part or Please attach the page with the details of spare parts needed _____

_____

◯ Others, please describe _____

IMPORTANT: ONLY THE DAMAGED PART WILL BE REPLACED, NOT THE COMPLETE SET.

Bestway reserves the right to request photographic evidence of defective parts, or to require the sending of the item for additional testing.
In order to best assist you, we request all information you provide is complete.

FOR FAQ, MANUALS, VIDEOS OR SPARE PARTS, PLEASE VISIT OUR WEBSITE WWW.BESTWAY-SERVICE.COM.
VIDEOS ARE ALSO AVAILABLE ON OUR BESTWAY CHANNEL ON YOU TUBE: http://youtube.com/user/BestwayService.

Bestway®

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 英

GEBRUIKERSHANDLEIDING

#65046

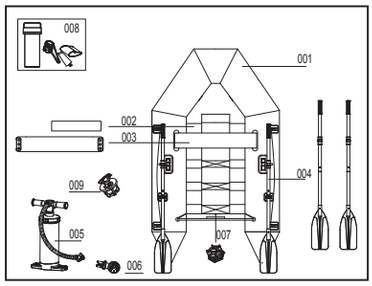

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65046ASS15
002	Vloerplank	4	P6875
003	Bank	1	F3H101
004	Roeispaan	1 paar	P5L334
005	Luchtpomp	1	P3045B
006	Manometer	1	P5C403
007	Afvoerklep	1	F3C092ASS14
008	Reparatieset	1	P6J718ASS14
009	Luchtklepdeksel	2	F6H190

#65064

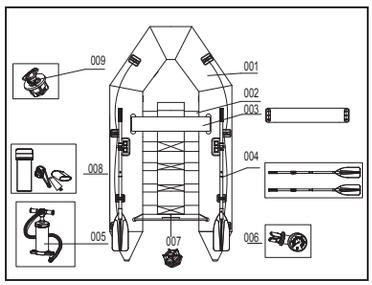

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65064ASS15
002	Vloerplank	5	P6875
003	Bank	1	F3H101
004	Roeispaan	1 paar	P5L334
005	Luchtpomp	1	P3045B
006	Manometer	1	P5C403
007	Afvoerklep	1	F3C092ASS14
008	Reparatieset	1	P6J718ASS14
009	Luchtklepdeksel	3	F6H190

#65047

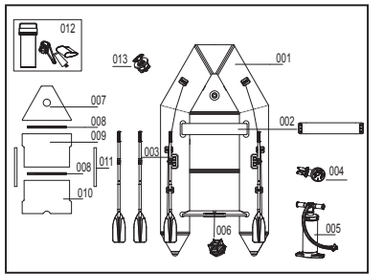

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65047ASS15
002	Bank	1	P6876
003	Roeispaan	1 paar	F6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Plank 1	1	P6877
008	Planksleuf	2	P6880
009	Plank 2	1	P6878
010	Plank 3	1	P6879
011	Zijsleuf	2	P6881
012	Reparatieset	1	P6J718ASS14
013	Luchtklepdeksel	4	F6H190

#65048

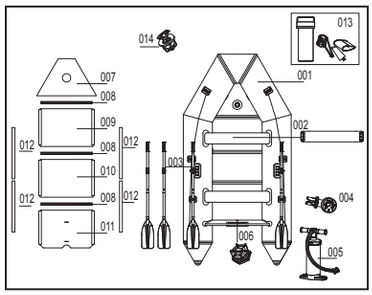

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65048ASS15
002	Bank	2	P6876
003	Roeispaan	1 paar	F6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Plank 1	1	P6882
008	Planksleuf	3	P6885
009	Plank 2	1	P6883
010	Plank 3	1	P6883
011	Plank 4	1	P6884
012	Zijsleuf	4	P6886
013	Reparatieset	1	P6J718ASS14
014	Luchtklepdeksel	4	F6H190

#65049

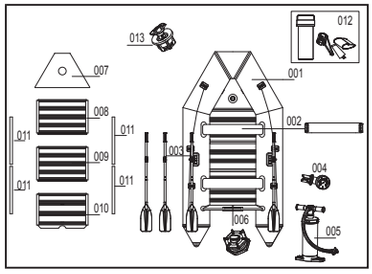

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65048ASS15
002	Bank	2	P6876
003	Roeispaan	1 paar	F6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Plank 1	1	P6894
008	Plank 2	1	P6887
009	Plank 3	1	P6887
010	Plank 4	1	P6888
011	Zijsleuf	4	P6886
012	Reparatieset	1	P6J718ASS14
013	Luchtklepdeksel	4	F6H190

#65063

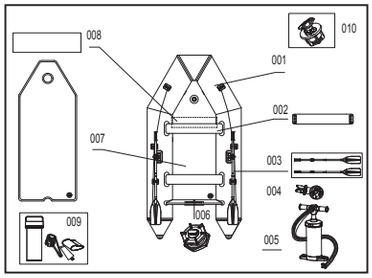

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65048ASS15
002	Bank	2	P6876
003	Roeispaan	1 paar	P6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Airdeck-vloer	1	65063DASS15
008	Basisplank	1	P6928
009	Reparatieset	1	P6J718ASS14
010	Luchtklepdeksel	5	F6H190

#65050

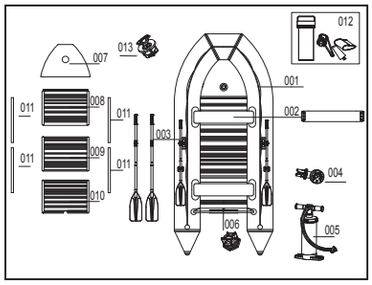

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65050ASS15
002	Bank	2	P6889
003	Roeispaan	1 paar	F6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Plank 1	1	P6890
008	Plank 2	1	P6891
009	Plank 3	1	P6891
010	Plank 4	1	P6892
011	Zijsleuf	4	P6893
012	Reparatieset	1	P6J718ASS14
013	Luchtklepdeksel	4	F6H190

#65062

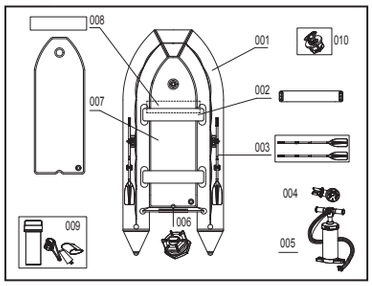

Onderdeelnr.	Beschrijving	HOEV.	RESERVEONDERDEEL NR.
001	Boot	1	65050ASS15
002	Bank	2	P6889
003	Roeispaan	1 paar	P6H717ASS14
004	Manometer	1	P5C403
005	Luchtpomp	1	P3045B
006	Afvoerklep	1	F3C092ASS14
007	Airdeck-vloer	1	65062DASS15
008	Basisplank	1	P6927
009	Reparatieset	1	P6J718ASS14
010	Luchtklepdeksel	5	F6H190

EN ISO 6185 - 1 TYPE II
BESCHERMD WATER
= 2.25 kw (3.0 pk) = 2 = 0
= 258 kg (568.8 pond)
= 0.23 bar 3.34 psi
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65046
LAND VAN OORSPRONG: CHINA

EN ISO 6185 - 1 TYPE II
CATEGORIE D
= 3.7 kw (5 pk) = 3 = 0
= 380 kg (837 pond)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65064
LAND VAN OORSPRONG: CHINA

EN ISO 6185 - 2 TYPE V
CATEGORIE D
= 7.5 kw (10 pk) = 3 = 1
= 480 kg (1058.2 pond)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65047
LAND VAN OORSPRONG: CHINA

EN ISO 6185 - 2 TYPE V
CATEGORIE C
= 11.2 kw (15 pk) = 4 = 1
= 640 kg (1411 pond)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65048
LAND VAN OORSPRONG: CHINA

EN ISO 6185 - 2 TYPE V
CATEGORIE C
= 11.2 kw (15 pk) = 3 = 1
= 640 kg (1411 pond)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65049
LAND VAN OORSPRONG: CHINA

EN ISO 6185 - 2 TYPE V
CATEGORIE C
= 11.2 kw (15 pk) = 4 = 1
= 640 kg (1411 pond)
= 0.23 bar 3.34 psi
94/25/EC 2003/44/EC
CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
FABRIKANT: Bestway
MODELNUMMER: 65063
LAND VAN OORSPRONG: CHINA

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 荷

EN ISO 6185 - 3 TYPE VII	
CATEGORIE C	
= 22.5 kw (30 pk)	= 6 = 0
+ + = 780 kg (1719.6 pond)	
= 0.23 bar 3.34 psi	94/25/EC 2003/44/EC CE
TÜVRheinland ZERTIFIZIERT www.tuv.com ID 1000000000 GS geprüfte Sicherheit	CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
MODELNUMMER: 65050	FABRIKANT:
LAND VAN OORSPRONG: CHINA	Bestway®

EN ISO 6185 - 3 TYPE VII	
CATEGORIE C	
= 18.4 kw (25 pk)	= 6 = 0
+ + = 780 kg (1719.6 pond)	
= 0.23 bar 3.34 psi	94/25/EC 2003/44/EC CE
TÜVRheinland ZERTIFIZIERT www.tuv.com ID 1000000000 GS geprüfte Sicherheit	CERTIFICAATHOUDER: BESTWAY INFLATABLES & MATERIAL CORP. NO.3065 CAOAN ROAD, SHANGHAI, 201812, CHINA
MODELNUMMER: 65062	FABRIKANT:
LAND VAN OORSPRONG: CHINA	Bestway®

Bootontwerp categorie D-"BESCHERMD WATER": Ontworpen om te varen in beschermd kustwater, baaitjes, meertjes, rivieren en kanalen wanneer de condities het toelaten tot en met windkracht 4 en golfhoogtes tot en met 0,3 m en occasionele golven van maximum 0,5 m hoog, bijvoorbeeld veroorzaakt door voorbijvarende vaartuigen.
Design Categorie C "BIJ DE KUST": Ontworpen voor reizen in kustwater, grote baaien, riviermondingen, meren en rivieren waar condities tot en met windkracht 6 en aanzienlijke golfhoogtes tot en met 2 meter mogelijk kunnen zijn.
WAARSCHUWING: Om de boot niet te beschadigen en de inzittenden niet te verwonden, gelieve de gegevens aangeduid op het plaatje van de fabrikant niet te overschrijden.

Technische Kenmerken

Item	Afmetingen	Geadviseerde werkdruk	Maximale laadcapaciteit	Maximaal vermogen motor
65046	2.30m x 1.30m (91"x51")	3.34psi 0.23bar	258 kg (568.8 pond) 2 violwassenen	2.25 kw (3 pk)
65064	2.70m x 1.37m (106"x57")	3.34psi 0.23bar	380 kg (837 pond) 3 violwassenen	3.7 kw (5 pk)
65047	2.80m x 1.52m (110" x 60")	3.34psi 0.23bar	480 kg (1058.2 pond) 3 violwassenen + 1 kind	7.5 kw (10 pk)
65048;65049 65063	3.30m x 1.62m (130" x 64")	3.34psi 0.23bar	640 kg (1411 pond) 4 violwassenen + 1 kind	11.2 kw (15 pk)
65050	3.80m x 1.80m (150" x 71")	3.34psi 0.23bar	780 kg (1719.6 pond) 6 violwassenen	22.5 kw (30 pk)
65062	3.80m x 1.80m (150" x 71")	3.34psi 0.23bar	780 kg (1719.6 pond) 6 violwassenen	18.4 kw (25 pk)

WAARSCHUWING

BELANGRIJKE VEILIGHEIDSVOORSCHRIFTEN

Volg alle Veiligheidsvoorschriften en Gebruiksaanwijzingen. Als u dit niet doet, kan dit leiden tot overbelasting, ontploffen van de boot en verdrinking.

1. Overschrijdt het maximaal toegelaten aantal inzittenden niet. Ongeacht het aantal personen aan boord, moet het total gewicht van de personen en uitrustingen nooit meer bedragen dan de maximaal aanbevolen last. Gebruik altijd de zittingen / zitplaatsen die voorzien zijn.
2. Bij het laden van het vaartuig mag de maximaal aanbevolen last niet overschreden worden: Laad het vaartuig voorzichtig en verdeel het gewicht zodat de boot het evenwicht niet verliest. Zware gewichten worden het best niet rechtopstaand geplaatst.
   OPMERKING: De maximaal aanbevolen last behelst het gewicht van alle personen aan boord, de provisies en persoonlijke bezittingen, alle uitrustingen die niet begrepen zijn in de massa van het vaartuig, cargo (indien aanwezig) en alle consumables zoals water, brandstof, enz.
3. Wanneer de boot gebruikt wordt, moeten de veiligheidsinrichtingen zoals zwemvesten en boeien vooraf gecontroleerd worden en altijd gebruikt worden.
4. Vóór elk gebruik worden alle onderdelen van de boot grondig nagekeken, inclusief de luchtkamers, de grijptouwen, de roeispanen en luchtkleppen, om erover te waken dat alles in goede conditie verkeert en stevig vast zit. Voer de nodige reparaties uit wanneer u schade vaststelt.
5. Emmers, waterschoppen en luchtpompen moeten altijd beschikbaar zijn in geval van een luchtlek of wanneer de boot water opneemt.
6. Wanneer de boot in beweging is, moeten alle inzittenden blijven zitten om niet in het water te vallen. Houd de boot in evenwicht. Een ongelijke verdeling van de personen of lasten in de boot kan de boot doen kantelen en zal leiden tot verdrinking.
7. Gebruik de boot dichtbij de kust en let op natuurlijke verschijnselen zoals de wind, eb en vloed en golven. **LET OP AFLANDIGE WIND EN STROMEN.**
8. Kan het noodzakelijk zijn de overige kamers wat meer op te blazen om te voorkomen dat de boot gaat zinken.
9. Scherpe en ruwe voorwerpen zoals rotsen, cement, schelpen, glas enz. kunnen de boot doorboren. Om schade te voorkomen, de boot niet slepen ober ruwe oppervlakken.
10. Bij de keuze van een buitenboordmotor, raadpleeg de Technische Kenmerken in de instructies om de correcte paardenkracht te raadplegen.
11. Voor elektrische motoren op batterijen dient opgemerkt dat het zuur van de batterijen bijtend kan zijn en schade kan veroorzaken aan de huiden het materiaal van de boot.
12. Voor de motor die draait op brandstof zoals gas, olie of benzine moet voorzichtig te werk gegaan worden. Deze ontvlambare producten moeten uit de buurt van naakte vlammen gehouden worden. Maak het materiaal van de boot onmiddellijk schoon als er brandstofspatten op zitten. Wees u bewust van de potentieel schadelijke effecten van zulke vloeistoffen als batterijzuur, olie en benzine. De vloeistoffen kunnen uw boot beschadigen.
13. Blaas op volgens de genummerde luchtkamers en nominale waarde aangegeven op de boot, want als te veel opgeblazen wordt kan de boot ontploffen. Overschrijding van de hoeveelheden die op het typeplaatje staan aangegeven kan leiden tot beschadiging, kapseizen en zinken.
14. Als u de Sleepringen gebruikt om de boot te slepen, ga dan langzaam te werk om geen schade te voorkomen.
15. Raak vertrouwd met het gebruik van een boot. Controleer in uw buurt of een opleiding nodig is. Informeer uzelf over plaatselijke regels en gevaren verbonden met varen en/of andere wateractiviteiten.

BEWAAR DEZE GEBRUIKSAANWIJZING

Installatie van vloerplanken (Alleen voor 65047 / 65048 / 65049 / 65050)

1. Kies een vlakke en gladde plaats die vrijgemaakt wordt van scherpe voorwerpen. Neem de boot uit de verpakking en spreid uit.
2. Blaas de kiel op en orden de vloerplanken.
3. Steek Plank 1 in de boog en duw hem naar voor tot de Luchtklep van de Opblaasbare Kiel uitgelijnd is met het gat in de plank. (FIG. 1)
4. Plaats de laatst genummerde plank (Plank 3 of 4) in het achterstuk van de boot en duw de plank onder de dwarsbalk. (FIG. 2)
5. Lijn het uitstekend deel van Plank 1 uit met de uitsparing van Plank 2 en duw beide delen samen. Lijn het uitstekend deel van Plank 3 uit met de uitsparing van Plank 4 en duw beide delen samen. (FIG. 3) Voor houten vloeren, gebruik de planksleuven om de twee planken te verbinden.
6. Til de Planken 2 en 3 op, lijn het uitstekend deel van Plank 2 uit met de uitsparing van Plank 3 en beide planken naar beneden zodat ze samenvallen. (FIG. 3)
7. Verbind de zijsleuven met de vloerplanken. (FIG. 4)

Opmerking:
- De vloerplanken moeten gemonteerd zijn voordat de romp wordt opgeblazen.
- De nummers op de vloerplanken moeten naar boven gericht zijn.
- Controleer na de montage zorgvuldig dat de vloerplanken nauwsluitend zijn. Als ze niet nauwsluitend of vlak zijn, monteer ze dan opnieuw.

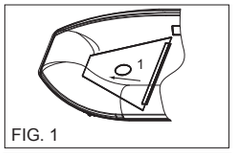

FIG. 1

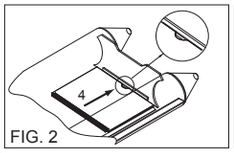

FIG. 2

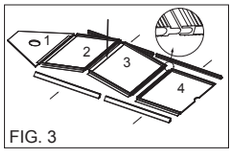

FIG. 3

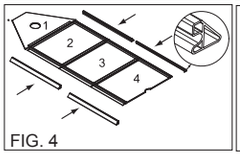

FIG. 4

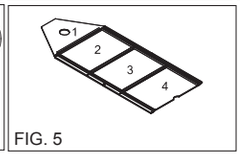

FIG. 5

Installatie Airdeck-vloer (alleen voor 65062/65063)

1. Selecteer een vlakke locatie en zorg dat er zich geen scherpe objecten in het gebied bevinden. Neem de boot uit de verpakking en spreid uit.
2. Plaats de basisplank door de riem onder de airdeck-vloer. Plaats de airdeck-vloer op de kiel en blaas vervolgens op.

Montage van de romp

1. Blaas de plank op door de dop van de luchtklep los te draaien (FIG. 6 POS.1). Zorg ervoor dat de binnenste veerklep niet ingedrukt is. Als deze ingedrukt is (FIG. 6 POS. 2), druk op de veerklep en draai in tegenwijzerzin zodat de binnenste veerklep in de correcte positie is(FIG. 6 POS. 3). Bevestig de manometer op de slang en de slang op de opblaaspositie op de hogedruk handpomp. Blaas de plank op tot 0,23 bar (3.34 psi). Na het opblazen, schroef de dop op de luchtklep (FIG. 6 POS.4)

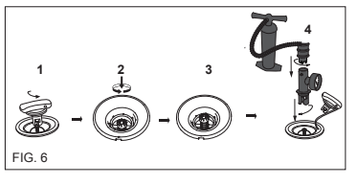

FIG. 6

Opmerking: Als de romp te hard is opgepompt, drukt u op de controleschacht, om de luchtdruk tot een acceptabel niveau te verlagen en de luchtklep veilig vast te zetten.
Opmerking: De manometer dient enkel voor opblaasdoeleinden en de waarde van de manometer dient enkel ter referentie, het is geen precisietoestel.

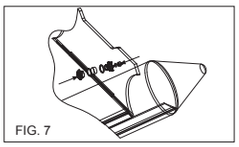
FIG. 7

2. Steek de plug in de Drainageklep op de Dwarsplank. (FIG. 7)

Opmerkingen:
- Gebruik alleen pompen goedgekeurd door Bestway®.
- Gebruik nooit motoraangedreven hogedrukluchtpompen, omdat die te veel opblazen.
- Te veel en te weinig opblazen is gevaarlijk.
- Controleer de druk altijd vooraleer de boot te gebruiken.
- Ga nooit op de boot staan tijdens het opblazen en leg er geen voorwerpen op.
- Open de dop van de luchtklep nooit als de boot in gebruik is.
- Zorg ervoor dat de klep goed dicht is vooraleer de boot te gebruiken.


FIG. 8

Installatie Zitplank
Schuif het zitje op zijn plaats door de kleppen op beide kamers van de boot in de inkepingen op de Plank van het Zitje te steken. (FIG. 8)

Installatie Roeispanen

1. Verbind de twee assen van de roeiriemen samen en zorg ervoor dat de veerpennen in hun positie klikken. (FIG. 9)
2. Maak de roeispanen vast aan de dollen en vergrendel ze in de juiste positie. (FIG. 10 & 11)

Opmerking: Wanneer de roeispanen niet gebruikt worden, worden ze vastgezet in de Bevestigingen om schade te voorkomen.


FIG. 9


FIG. 10


FIG. 11

Installatie Buitenboordmotor
Wanneer de boot volledig opgeblazen is en te water gelaten is, bevestig de buitenboordmotor aan het bevestigingspunt in het midden van de boot.
Opmerking:
- Zorg ervoor dat de motor altijd bevestigd is aan het dwarselement.
- Lees de instructies van de buitenboordmotor voor de correcte installatie en het gebruik.
- Een boot te krachtig motoriseren kan verwondingen of zelfs de dood veroorzaken, en kan ook de boot beschadigen. Raadpleeg de gegevens op het product om het vermogen van de motor te kennen.

Aflaten

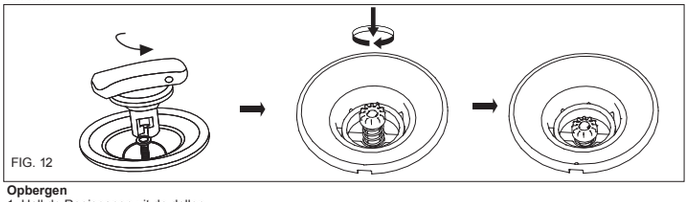
FIG. 12

Opbergen

1. Hall de Roeispanen uit de dollen.
   Opmerking: Bewaar alle accessoires voor later.
2. Maak de boot zorgvuldig schoon met een zachte zeep en schoon water.
   Opmerking: Gebruik geen aceton, zure en/of alkalische oplossingen.
3. Gebruik een doek om alle oppervlakken voorzichtig te drogen.
   Opmerking: Laat het product niet drogen aan rechtstreeks zonlicht. Droog de boot nooit met apparaten zoals elektrische blazers. Dit kan de boot beschadigen en de levensduur ervan verkorten.
4. Om de boot af te laten, open de Luchtkleppen door de Luchtkleppen door de comtroleschacht in te duwen en te draaien tot de kleppen open blijven. Laat de kamers van de romp tegelijk af, zodat de luchtdruk gelijktijdig afneemt. Zo voorkomt men schade aan de interne structuren van de boot.
5. Laat vervolgens de Kiel af.
6. Vouw de boot op van voor naar acher, om de resterende lucht af te laten. U kunt ook een pomp gebruiken om de resterende lucht af te voeren.

Reparaties
Als er grotere gaten zitten in de boot, gebruik dan de meegeleverde lijm en PVC-patch.

Registratie (Alleen voor klanten uit VS/Canada)
Indien u uw boot moet registreren, noteer dan het Hull Identification Number van de boot en de modelnaam en ga naar de website www. bestway-service.com om uw Certificate of Origin te verkrijgen. U kunt ook een e-mail sturen naar info@bestway-northamerica.com voor dit Certificate of Origin.

BEWAAR DEZE HANDLEIDING OP EEN VEILIGE PLAATS EN OVERHANDIG HEM AAN DE NIEUWE EIGENAAR INDIEN DE BOOT DOORVERKOCHT WORDT.

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 荷

Beperkte BESTWAY® Fabrieksgarantie

Het product dat u hebt aangekocht heeft een beperkte garantie. Bestway® staat achter onze kwaliteitsgarantie en verzekert door middel van een vervangingsgarantie dat uw product vrij is van fabrieksfouten die lekken veroorzaken.
Om een garantieclaim te bepalen, moet dit formulier ingevuld worden en samen met een kopie van uw aankoopbewijs bezorgd worden aan uw lokale Bestway Dienst Naverkoop.
Neem contact op met uw lokale Bestway Dienst Naverkoop vooraleer u enige documenten zendt-ze zullen u volledige instructies bezorgen m.b.t. wat nodig is voor uw claim.
Bestway® vervangt geen producten die verwaarloosd zijn of die niet volgens de gebruiksaanwijzing zijn gebruikt.
De garantie van Bestway dekt fabricagedefecten die ontdekt wordt tijdens het uitpakken van het product of tijdens het gebruik zoals aanbevolen in de gebruikershandleiding, deze garantie is enkel van toepassing op het product dat niet gewijzigd mag zijn door enige derde. Het product moet opgeborgen en gehanteerd worden overeenkomstig de technische aanbevelingen.
Deze garantie is onderhevig aan de volgende beperkingen:
De garantie is geldig voor de originele eigenaar en alleen wanneer het product gebruikt is voor normale recreatieve activiteiten en is niet geldig voor producten die gebruikt worden voor verhuur of tijdens schoolactiviteiten. Als een product door Bestway als defect wordt beoordeeld, dekt de garantie alleen de reparatie of vervanging van het defecte product.
Bestway zal niet verantwoordelijk zijn voor enige kosten, verliezen of schade tengevolge van het verlies of gebruik van dit product. Deze garantie dekt geen schade veroorzaakt door verkeerd gebruik, misbruik, verzuim, normale slijtage, inclusief maar niet beperkt tot, gaten, schade te wijten aan buitensporige blootstelling aan hitte, schade veroorzaakt door incorrecte hantering en opberging, schade veroorzaakt door gebruik in golven of branding, breken van het board door vallen of crashing in surfomstandigheden, of schade veroorzaakt door iets anders dan defecten van materiaal en afwerking.
Dit product mag niet gebruikt worden met overschrijding van het door de fabrikant aanbevolen maximaal draagvermogen. Deze garantie is ongeldig als enige niet-geautoriseerde reparatie, aanpassing of wijziging uitgevoerd werd aan enig onderdeel van de apparatuur.
Vervangingen en reparaties verlengen de duur van de garantie niet. De datum die beschouwd wordt als de start van de garantie is de enige die getoond wordt in het originele ontvangstbewijs/aankoopfactuur.
Dit product is ontworpen overeenkomstig de standaarden voor een specifiek gebruik. Enige aanpassingen of transformaties hoger dan deze aangegeven door de fabrikant zouden kunnen resulteren in ernstige risico's voor de gebruiken en maken de garantie ongeldig.

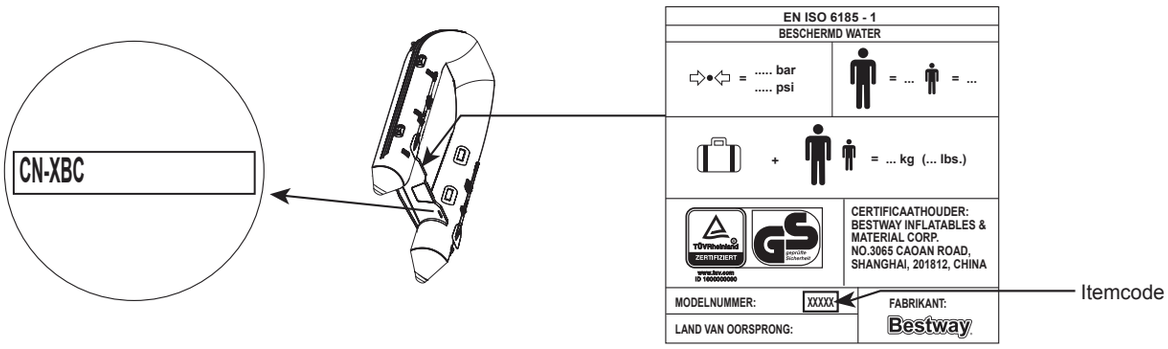

Tekeningen enkel voor illustratiedoeleinden. Niet op schaal.

Kopieer het CIN-nummer dat zich nabij het achterstuk bevindt **Schrijf duidelijk uw itemcode neer:** _____

CIN-nummer: _____ **Datum van aankoopbewijs:** _____

AAN: BESTWAY® SERVICE DEPARTMENT **DATUM** _____ **Code klantnummer** _____

FAX/E-MAIL/TEL: Raadpleeg uw land volgens de informatie op de achteromslag of op onze website: www.bestway-service.com.
Geeft uw complete adres door. **Opmerking:** Als het adres niet compleet is, zorgt dit voor vertraging bij de verzending.
Bestway behoudt zich het recht voor om onafgeleverde pakketten terug te leveren wanneer de ontvanger in fout is.

BENODIGDE INFORMATIE – GEEF AUB UW LEVERINGSADRES DOOR

Name: _____ **Adres:** _____

Postcode: _____ **Detailhandelaar:** _____

Land: _____ **Woonplaats:** _____

Mobiel: _____ **Telefoon:** _____

Fax: _____ **E-mail:** _____

Probleembeschrijving

◯ Bij een luchtlek, beschrijf welk deel precies lek is _____

◯ Het item is onvolledig, voer de naam van het ontbrekende deel in of bevestig de pagina met de details van de benodigde reserveonderdelen _____

_____

◯ Anders. Beschrijven a.u.b.: _____

BELANGRIJK: ALLEEN HET BESCHADIGDE ONDERDEEL ZAL VERVANGEN WORDEN, NIET DE VOLLEDIGE SET.

Bestway behoudt zich het recht voor om fotografische bewijzen van defecte onderdelen te vragen of om het item te verzenden voor extra testen.
Om u het beste te kunnen helpen vragen we u om complete informatie te bezorgen.

VOOR FAQ, HANDLEIDINGEN, VIDEO'S OF RESERVEONDERDELEN, GA NAAR ONZE WEBSITE WWW.BESTWAY-SERVICE.COM.
VIDEO'S ZIJN OOK BESCHIKBAAR OP ONS BESTWAY CHANNEL OP YOUTUBE: http://youtube.com/user/BestwayService.

Bestway®

S-S-003251

S-S-003251/21x28.5cm(65046/65047/65048/65049/65050/65062/65063/65064）JS-YF-2015-B-01216/ 荷