


Figure 1

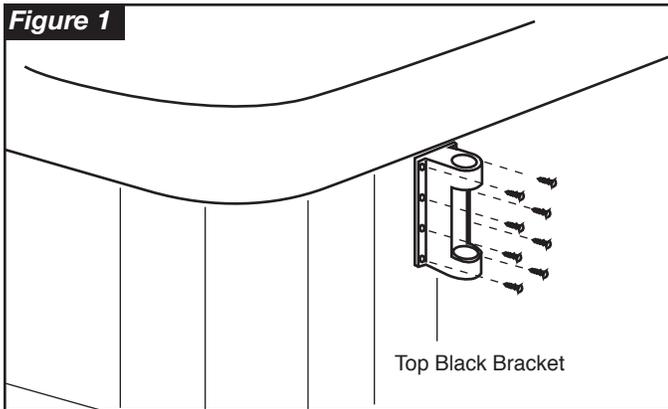

SAFE-T-RAIL

Installation Instructions

Step #1

Slip black mounting brackets on rail and determine desired rail locations on spa cabinet.

Step #2

With rail location determined, mount top black bracket at the highest point on the cabinet using the 8 - #12 screws provided. **(See Fig. 1)**

Note: To prevent splitting of the cabinet pre-drill screw holes with 1/8" drill bit.

Step #3

With top bracket mounted adjust rail height to clear the top of the spa by a minimum of 1" and mount bottom bracket.

Step #4

The Safe-T-Rail can be rotated either in or out of the spa by depressing button lock in bottom black bracket and locked into the desired position.

Note: Rail/Stand is an ideal option, when the wood cabinet may not be strong enough to support the Safe-T-Rail. **(See Fig. 2)**

You are done!

Figure 2

